

## Instruction Manual for G210A

## Assembly:

1. Make sure the width of the BB shell (A) is 68mm and the I.D. is 54.5mm before assembly.

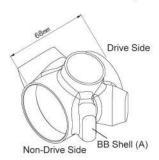


3. Fix the eccentric BB (B) by your palm to the end surface of the BB shell and make sure there is no gap in between.

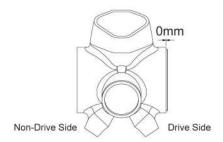


5. Assembly is completed.



 Make sure the direction of the eccentric BB (B) is correct. Install the drive side of the eccentric BB (B) into the non-drive side of the BB shell (A).

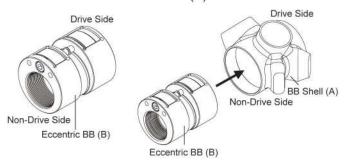


 Clockwise tighten the screw with 5mm Allen key (C). (The suggested tightening torque is 18Nm.)

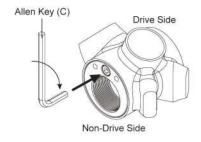


## Disassembly:

 Counterclockwise loosen the screw to take out the eccentric BB (B).

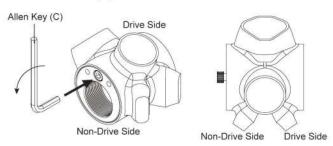

2. Disassembly is completed.

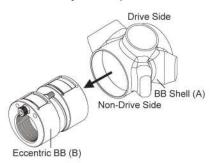

- Notes: 1. This converter is suggested to be used for Alloy Aluminum BB shell. Carbon BB shell is not compatible.
  - 2. After all the parts are tightened and fixed, please also periodically maintain your bike and check if any part gets loose for riding safety.



No. 45, Kung 9th Rd., Rinan Vil., Tachia Dist., Taichung 43769, Taiwan TEL: +886-4-26815039 FAX: +886-4-26815917 sales@firstcomponents.com www.firstcomponents.com